




alienpro.com.mx

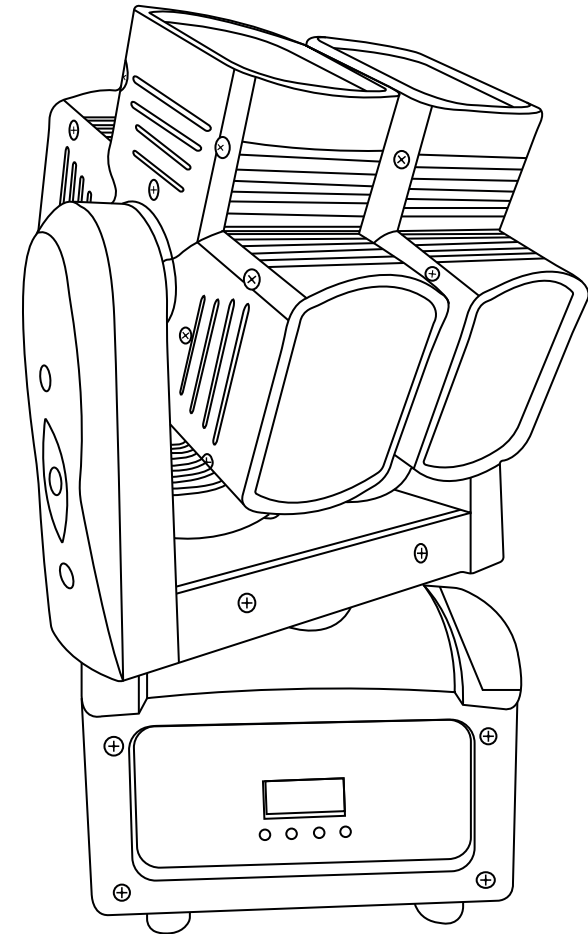

AXIS

Foreword

Thanks for using our LED Stage Lighting Equipment. Before using, please read the instruction carefully. The instruction include important installing and using information. Please use the fixtures following the instruction and keep the user manual properly.

Our product use engineering plastic shell which is new, beautiful and can bear high temperature and high hardness metal body. Our product strictly follow the standard of CE and CCC to design and product. It's conform to the international standard DMX512 signal protocol. It's can be use alone or connect together. It's have rotation fast, low noise and multifunctional as the product's feature. It's special for KTV, Dance hall, Night club, Bar and so on.

Specification

Voltage: AC100-240V, 50,60HZ
 Power Consumption: 140W
 Light Source: 8PCS*15W RGBW 4 in 1 High Brightness LED
 Channel: 10/21CH
 Control Mode: DMX512, Auto, Sound, Master-slave
 Net Weight: 7.0 kg
 Application: Bar, Night Club, Stage performance and etc.

Safety Instruction

Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet
 Unpack and check carefully there is no transportation damage before using the unit.
 Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit
 It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
 The unit is for indoor use only. Use only in a dry location
 The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked
 Disconnect main power before replacement or servicing.
 Make sure there is no flammable materials close to the unit while operating as it is fire hazard.
 Use safety cable when fixes this unit. Don't handle the unit by taking its head only, But always by taking its base.
 Maximum ambient temperature is ta: 40. Don't operate it where the temperature is higher than this. Unit surface temperature may reach up to 85. Dont touch the housing bare-hand during its operation. Turn off the power and allow about 15 minutes for the unit to cool down before replacing or serving.
 In the event of serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type Spare parts.

18	WHITE Dimmer2	0-255	0~100%
19	Color Self Run	0-7	No Function
		8-127	Fixed 15 Colors
		128-191	Color Transition
		192-255	Color Grad
20	Speed Of Color Self Run	0-255	From Slow To Fast
21	Macro Function	0-59	No Function
		60-80	When the horizontal or vertical motor moves, the closed light is effective.
		81-100	Cancel above function
		101-150	Auto
		151-200	Sound Effect
		201-249	Random Sound Control Effect
		250-255	RESET(stop 5 seconds)

Motor fine tuning function operation

Press "MENU" key to enter menu, then press the OK button "ENTER" at least 3 seconds above, menu interface display "pan (x axis motor tuning)", press the (+),(-) button to choose pan or tilt. And press OK button to adjust the position of the motor in the numerical -127----127. Press OK button to save.

5	Vertical Motor 1	0-9	No Function
		10-127	From Fast To Slow Positive Rotation
		128-255	From Fast To Slow Reverse Rotation
6	Vertical Motor 2	0-255	360° Stroke Position
7	Vertical Motor 2 Tuning	0-255	When the CH8 value effectively in the 0-9
8	Vertical Motor 2	0-9	No Function
		10-127	From Fast To Slow Positive Rotation
		128-255	From Fast To Slow Reverse Rotation
9	Total Dimming	0-255	0~100%
10	Strobe	0-15	Light On
		16-131	From Slow To Fast
		132-139	Light On
		140-181	Quickly out slow down, from slow to fast.
		182-189	Light On
		190-231	Quick Off, Slow Light on
		232-239	Light On
		240-247	Random Strobe
248-255	Light On		
11	REDDimmer1	0-255	0~100%
12	GREEN Dimmer1	0-255	0~100%
13	BLUE Dimmer1	0-255	0~100%
14	WHITE Dimmer1	0-255	0~100%
15	REDDimmer2	0-255	0~100%
16	GREEN Dimmer2	0-255	0~100%
17	BLUE Dimmer2	0-255	0~100%

Warning

- To prevent or reduce the risk of electrical shock or fire, do not expose the unit the rain or moisture.
- Do not open the unit within five minutes after switching off.
- The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.

Caution

There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, Please contact your nearest dealer.

Installation

The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. And make sure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the unit's weight. Also always use a safety cable hold 12 times of the weight of the unit when installing the fixture. The equipment must be fixed by professionals. And it must be fixed at a place where is out of the touch of people and has no one pass by or under it.

Manual Setting

1	ADDR	A001~A512	DMX address setting
2	CHND	10CH	10CH Mode
		21CH	21CH Mode
3	SLND	MAST	Master Mode
		SLAV	Slave Mode
4	SHND	SOUD	Sound Mode (SP0 – SP9)
		AUTO	Auto Mode
5	SOUD	ON	Sound On
		OFF	Sound Off
6	SENS	0	OFF
		1~100	100 The Most Sensitive
7	BLND	YES	
		NO	
8	LED	ON	Back Light On
		OFF	Back Light Off
9	DISP	YES	Reverse Video
		NO	
10	PAN	Yes	Horizontal Reverse
		No	

11	1TIL	Yes	1 Vertical Reverse
		No	
12	2TIL	Yes	2 Vertical Reverse
		No	
13	MANU	PAN	
		TILT1	
		TILT2	
		RED1	
		GREEN1	
		BLUE1	
		WHITE1	
		RED2	
		GREEN2	
		BLUE2	
		WHITE2	
		DIMMER	
		STROBE	
		MANUAL TEST	
		14	TEST
15	HOUR	0 - 9999	Using Time
16	VER	V104	Software Version Number
17	RSET	YES	RESET
		NO	

DMX Channel Mode

(10 CH Channel Mode)

Channel	Function	Value	Description
1	Standard Motor	0-255	0° ~540°
2	Vertical Motor	0-127	360° Stroke Position
		128-191	From fast to slow positive rotation
		192-255	From slow to fast reserve rotation

3	Vertical Motor	0-127	360° Stroke Position
		128-191	From fast to slow positive rotation
		192-255	From slow to fast reserve rotation
4	Total Dimming	0 - 255	0 – 100%
5	Strobe	0-15	Light On
		16-131	From Slow To Fast
		132-139	Light On
		140-181	Quickly out slow down, from slow to fast.
		182-189	Light On
		190-231	Quick Off, Slow Light on
		232-239	Light On
		240-247	Random Strobe
6	RED Dimmer	0-255	0~100%
7	GREEN Dimmer	0-255	0~100%
8	BLUE Dimmer	0~255	0~100%
9	WHITE Dimmer	0-255	0~100%
10	Macro Function	0-59	No Function
		60-80	When the horizontal or vertical motor moves, the light will be close.
		81-100	Cancel above function
		101-150	Auto
		151-200	Sound Effect
		201-249	Random Sound Control Effect
250-255	RESET(stop 5 seconds)		

DMX Channel Mode

(21 CH Channel Mode)

Channel	Function	Value	Description
1	Level Motor Stroke	0-255	0° ~540°
2	Level Motor Tuning	0-255	
3	Vertical Motor 1	0-255	360° Stroke Position
4	Vertical Motor 1 Tuning	0-255	When the CH5 value in 0-9